




**Quick Exhaust Valve**

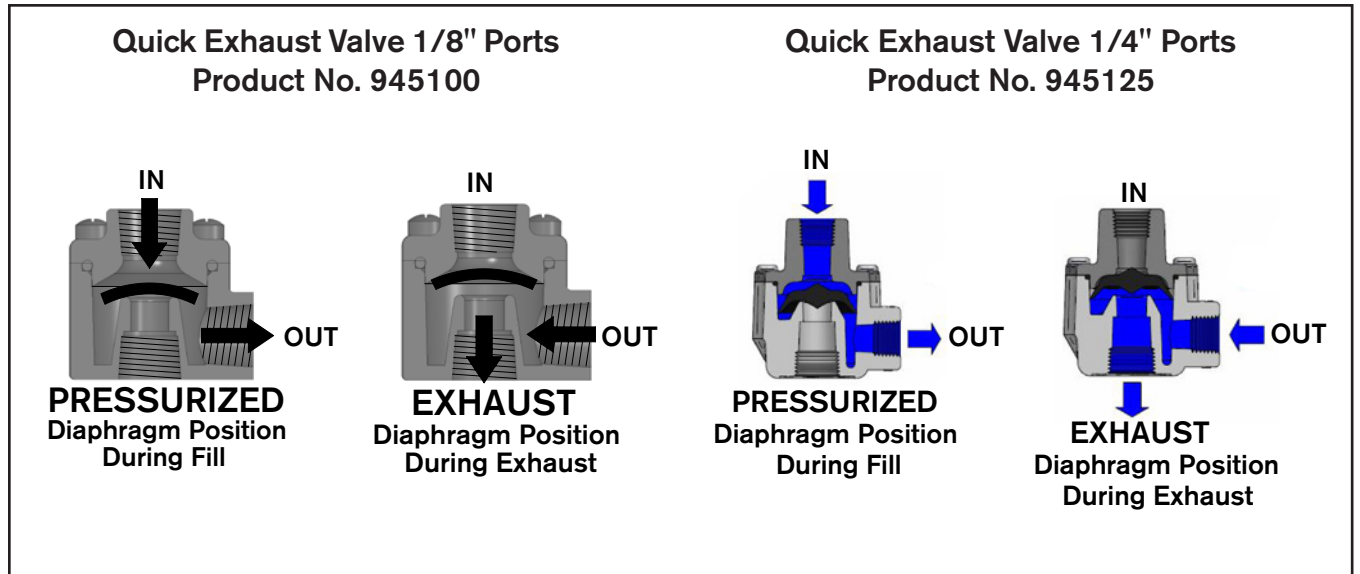

The Quick Exhaust Valve provides four functions: Fast Air Exhaust, Contamination Expulsion, Dual Pressure Shuttle Valve and Check Valve.

**Quick Exhaust Valve Benefits:**

- Speeds clutch and brake response times by allowing air to exhaust at the air inlet port instead of traveling back through the control valve.
- Minimizes "overlap" when using a clutch and brake with independent actuating pistons, ensuring brake torque fully decays before clutch torque rises and vice versa.
- Reduces motor current spike at start-up by increasing the rate of brake torque decay.
- Increases friction facing life by minimizing overlap between clutch-brakes, and motors and brakes.
- Generally allows higher cyclic rates if the clutches or brakes thermal limit allows it.

**Condensation/Contamination Expulsion Aid Benefits:**

- Allows condensation and other contaminants to be expelled when the control valve is at a higher elevation than the clutch or brakes air inlet.
- Reduces the possibility of the clutch or brake air chamber developing rust that could interfere with operation or degrade seals.

**Shuttle Valve Benefits:**

- If a clutch or brake needs to operate at two air pressures the quick exhaust valve can isolate the two circuits allowing a high pressure/torque start and a lower running pressure/torque as in a torque limiting application or spring engaged brakes to operate at less than full torque yet fully release.


**Check Valve Benefits:**

- If a clutch or brake needs a local reserve air supply in case of a primary air system failure a reservoir with a check valve on its inlet can isolate it from the primary system allowing time for a controlled shut down.


**Installation Instructions:**

- For quick exhaust or contaminate expulsion usage ensure the clutch or brake air inlet is located as close to the six-o'clock (bottom) position as possible so any liquids or contaminants flow towards it. Mount the Quick Exhaust Valve to the clutch or brake air inlet. The quick exhaust valve will open when a 3 to 4 psi drop occurs. For other uses see pneumatic circuit diagrams below.


**Typical Clutch-Brake Control Circuit**

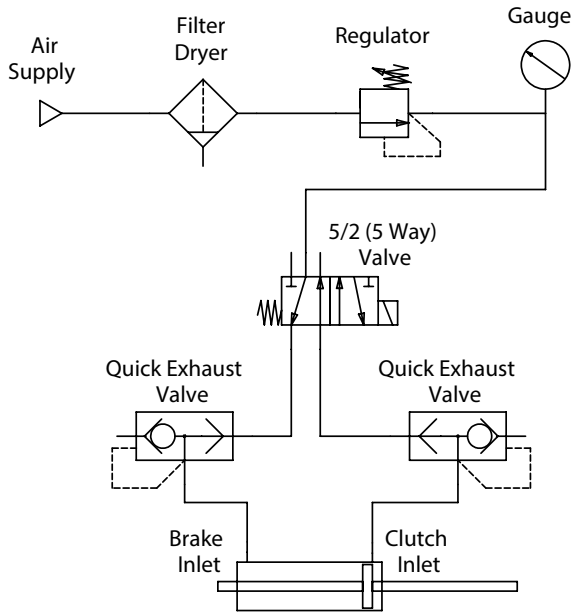


**Typical Two Pressure Clutch or Brake Control Circuit**

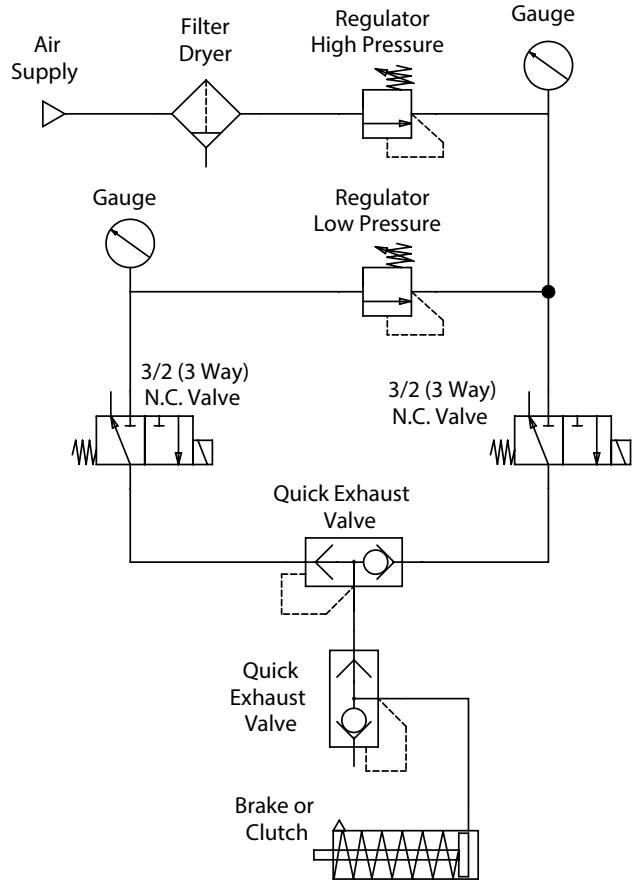

**Typical Clutch or Brake Control Circuit**

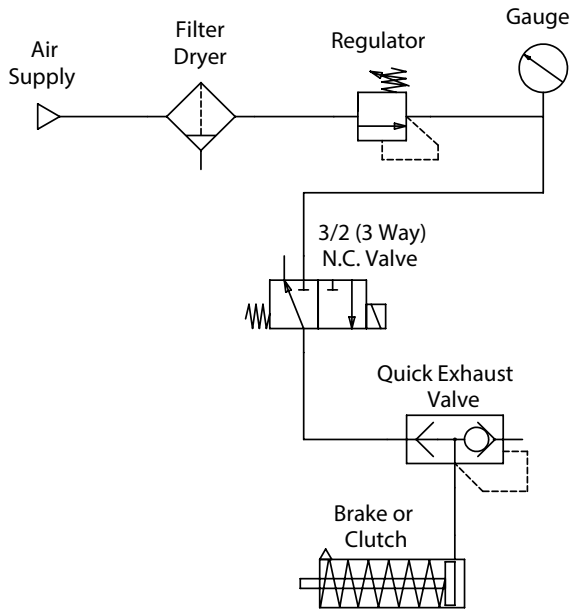

**Quick Exhaust Valve as Check Valve for Remote Air Pressure Reservoir**

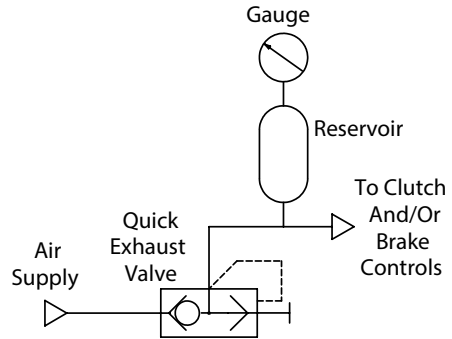

[www.nexengroup.com](http://www.nexengroup.com)

In accordance with Nexen's established policy of constant product improvement, the specifications contained in this document are subject to change without notice. Technical data listed in this document are based on the latest information available at the time of printing and are also subject to change without notice. For current information, please consult [www.nexengroup.com](http://www.nexengroup.com).

**nexen**<sup>®</sup>

Nexen Group, Inc.  
560 Oak Grove Parkway  
Vadnais Heights, MN 55127

800.843.7445  
Fax: 651.286.1099  
[www.nexengroup.com](http://www.nexengroup.com)

Nexen has sales offices throughout the United States, Europe, Japan, and Australia.